

Quick Guide Handmate UV600















Always wear personal safety gear (UV facial shield, gloves and UV protective clothes)

Unprotected bystanders: keep 6 meter distance !

Warning: The bottom of the lampunit becomes hot!

The Decorad HandMate UV 600 has a power cable of 60 centimeters. Connect the power cable to an extensioncord.

Mains/outlet: 200 - 250 V / 50 - 60 HzFuse: 10 - 16 A

Standard with small handle (optional) extension handle

Connect the extension handle to the lamp unit

Connect (carefull) the data cable of the extension handle to the back of the lamp unit

Press the (power) **ON** button The indicator light will burn

On the display of the lamp unit the text **COOL** will be shown





IMPORTANT ! ALWAYS cool a HOT UV lamp NEVER start up a HOT UV lamp. Press the button with the **lamp symbol** in order to start up the UV lamp.

On the display of the lamp unit the text **WAIT** will be shown The UV lamp needs 60 seconds to warm-up

When **DIM** is shown in the display, the HandMate UV 600 is ready to use

Use the button on the lampunit or the extension handle to start UV curing The shutter opens On the display of the lamp unit the text **FULL** will be shown

Full power UV can only be used in the safe range of 2 - 10 centimeters to any surface

DIST shown in display = distance to surface is not correct / unsafe, a beeping signal can be heard and the shutter closes.

Move the lamp unit in a position between 2 – 10 centimeters from the surface

Switch off the UV lamp to end curing . The text **COOL** will be shown.

Leave the HandMate UV 600 connected for min. 1 minute to cool down. Leave the HandMate UV 600 for 2 minutes to cool Press the (power) **OFF** button

ERROR MESSAGES CHECK MANUAL

- E14 LAMP OVERHEATED
- E15 FAN FAIL
- E16 SHUTTER FAIL
- E17 TEMPERATURESENSOR FAIL
- **U51 DISTANCE TO SUBSTRATE**
- **U94 TIME MANAGEMENT 5 MINUTES**