

## *User Manual*

# ***DecoRad® Handmate***

## ***UV 600***



**DecoRad® Systems bv**  
**Kruisboog 39B**  
**3905 TE Veenendaal**  
**The Netherlands**

**T: +31(0)318-550425**  
**E: [info@decorad.com](mailto:info@decorad.com)**  
**[www.decorad.com](http://www.decorad.com)**

## **Preface**

The DecoRad® Handmate UV 600 is the ultimate tool for instantly curing UV (floor) coatings.

UV has been used successfully for many years already for instantly curing inks, car paints, glues and coatings. The DecoRad® Handmate UV 600 is the result of the many years' experience of DecoRad® Systems with on-site use of UV in combination with coatings, varnishes and oils.

DecoRad® Systems has succeeded in providing the latest equipment and best technology.

### Characteristics of the DecoRad® Handmate UV 600

- Output 600 Watt
- CE marking
- ISO 9001
- Compact and user-friendly
- 1 Ultraviolet lamp Ozone Producing or Ozone Free, at your choice

This user manual provides the user with information about the safe usage and maintenance of the DecoRad® Handmate UV 600.



Carefully read through this user manual before using the the Handmate. Only then optimal safety is guaranteed.  
The DecoRad® Handmate UV 600 can only be operated by sufficiently qualified personnel.

Keep this user manual with the DecoRad® Handmate UV 600.

## Contents

<i>USER MANUAL</i> .....	1
<i>DECORAD® HANDMATE UV 600</i> .....	1
<i>PREFACE</i> .....	2
<i>CONTENTS</i> .....	3
1.1 MANUFACTURER .....	4
1.2 CE-MARKING .....	4
1.3 GUARANTEE .....	5
1.4 COPYRIGHT .....	5
1.5 LIABILITY .....	5
2. <i>SAFETY</i> .....	6
2.1 SAFETY SYMBOLS IN THIS USER MANUAL .....	6
2.2 SYMBOLS ON THE DECORAD® HANDMATE UV 600 .....	6
2.3 USAGE .....	7
2.4 Maintenance .....	7
2.5 Safety regulations .....	7
2.6 UV radiation .....	7
2.7 Risks of radiation .....	8
2.8 User .....	9
3. <i>MACHINE DESCRIPTION</i> .....	10
3.1 FUNCTION .....	10
3.2 OVERVIEW OF THE DECORAD® HANDMATE UV 600.....	10
3.3 CONTROL ELEMENTS.....	11
3.4 STANDARD EQUIPMENT .....	11
4. <i>PUTTING INTO OPERATION</i> .....	12
5. <i>ERROR MESSAGES</i> .....	15
6. <i>REPLACING LAMP</i> .....	16
7. <i>SPECIFICATIONS</i> .....	17

## 1. Introduction



*Carefully read through this user manual before using the DecoRad® Handmate UV 600. Optimal safety is only guaranteed if the user instructions, as described in this manual, are observed. The DecoRad® Handmate UV 600 can only be operated by sufficiently qualified personnel.*

### 1.1 Manufacturer

The DecoRad® Handmate UV 600 is manufactured by:

DecoRad® Systems bv  
Kruisboog 39B  
3905 TE Veenendaal  
The Netherlands

Phone: +31(0)318-550425  
E-mail: [info@decorad.com](mailto:info@decorad.com)  
[www.decorad.com](http://www.decorad.com)

For any questions regarding sales orders, deliveries, parts or shipments, please contact DecoRad® Systems bv.

### 1.2 CE-marking

The DecoRad® Handmate UV 600 comes with a CE marking. This means that the Handmate meets the fundamental safety demands of the European Community.

### **1.3 Guarantee**

The manufacturer of the DecoRad® Handmate UV 600 provides a 12 month warranty (carry-in) for parts and repair costs\*. This warranty is only valid if the DecoRad® Handmate UV 600 is used according to the specifications and the user and maintenance instructions are observed.

The DecoRad® Handmate UV 600 warranty lapses in case of:

- Inexpert use
- Insufficient maintenance
- Inexpert maintenance
- Alterations without prior permission of the manufacturer

The normal replacement parts (bulbs) do not fall under the factory warranty.

\* At the discretion of DecoRad® Systems bv

### **1.4 Copyright**

Copyright © DecoRad® Systems bv.

All rights reserved. Nothing from this publication can be multiplied, stored in an automated file and/or made public in any form, either electronically, mechanically, by photocopies, recordings, or any other way without prior written consent of the manufacturer.

### **1.5 Liability**

The manufacturer of the DecoRad® Handmate UV 600 is not liable for unsafe situations, accidents or damage as a consequence of:

- Ignoring warnings or instructions as stated on the DecoRad® Handmate UV 600 or as described in this user manual (including not correctly applying personal protection measures).
- The use of the DecoRad® Handmate UV 600 for any other application or in any other circumstances than indicated in this user manual.
- Making any kind of alterations to the DecoRad® Handmate UV 600. This also pertains to applying other replacement parts.
- Intensity of the usage is decisive for the degree of maintenance.

The manufacturer is not liable for consequential loss in case of malfunctions of the DecoRad® Handmate UV 600, such as damage to products, business interruption, production loss, etc.

## 2. Safety

This chapter describes the safety measures pertaining to the DecoRad® Handmate UV 600. Carefully read this chapter before putting the DecoRad® Handmate UV 600 into operation or performing maintenance work.

### 2.1 Safety symbols in this user manual

The following symbols are used in this user manual:



**A comment draws the user's attention to possible problems.**



**Danger of damage to the DecoRad® Handmate UV 600 if the instructions are not carefully executed.**

**Danger of serious injuries to the user if the instructions are not carefully followed.**

### 2.2 Symbols on the DecoRad® Handmate UV 600

The following symbols can be found on the DecoRad® Handmate UV 600:



**Wearing a UV protective DecoRad® face shield.**



**Wearing UV protective DecoRad® clothes**



**Wearing UV protective DecoRad® gloves**



**Surface can become hot when using the DecoRad® Handmate**



**Careful: UV light.  
Do not look into the light**



**Keep the room ventilated. The UV lamp might be full spectrum, so there can be ozone production, depending on the type of lamp.**

## 2.3 Usage

The DecoRad® Handmate UV 600 can only be operated by qualified personnel.



***The safety instructions described in this manual should be observed. If you deviate from these instructions, this can lead to serious personal or material damage.***

## 2.4 Maintenance

The DecoRad® Handmate UV 600 can only be operated by qualified personnel.



***The safety instructions described in this manual should be observed. If you deviate from these instructions, this can lead to serious personal or material damage.***

The maintenance mechanic should be acquainted with the entire contents of this user manual.

Intensity of the usage is decisive for the degree of maintenance.

Examples of this are:

- Housing
- UV lamps (dirt causes a decrease in UV yield, the number of burning-hours >500)
- Reflector: yield 1. Energy / 2. Output

## 2.5 Safety regulations

The DecoRad® Handmate UV 600 meets the fundamental safety and health demands of the relevant guidelines of the European Community. However, in case of inexpert or careless use, dangerous situations may still arise.



***Stay alert for dangerous situations!***

## 2.6 UV radiation

Ultraviolet radiation (or UV) is a proven process to disinfect water, air and solid surfaces which have been contaminated with micro-organisms. In addition to this, UV radiation is well-known for its application as a catalyst in drying processes. The effects of UV as a disinfectant have been extensively documented in scientific research.


UV radiation is a mixture of radiation of various wavelengths. In a rainbow, the visible part of the UV radiation is ordered according to the length of the waves. Progressing from purple to red, the waves become increasingly longer. The ultraviolet or UV has a wavelength shorter than that of purple. This part of the UV radiation is not visible as well.

Most of the UV radiation we get comes through sunlight. Not all UV radiation reaches the earth: a part is blocked by the ozone layer.

## 2.7 Risks of UV radiation

Both UVA and UVB can damage cells and genetic material, thus leading to skin cancer. UVB poses the greater risk here. Even though scientists used to think that UVA was not harmful, newer research has proven that UVA contributes 10 to 20 percent to the cancer risk.

In order to protect itself against damage to genetic material, the skin tries to thicken itself (after UVB exposure). Pigment cells create the substance melanin, which gives the skin a brown colour. This means that when the skin tans, it has already been damaged. Because the ozone layer is becoming increasingly thinner due to environmental pollution, less UV radiation is absorbed, thus leading to an increase of skin cancer occurrences.

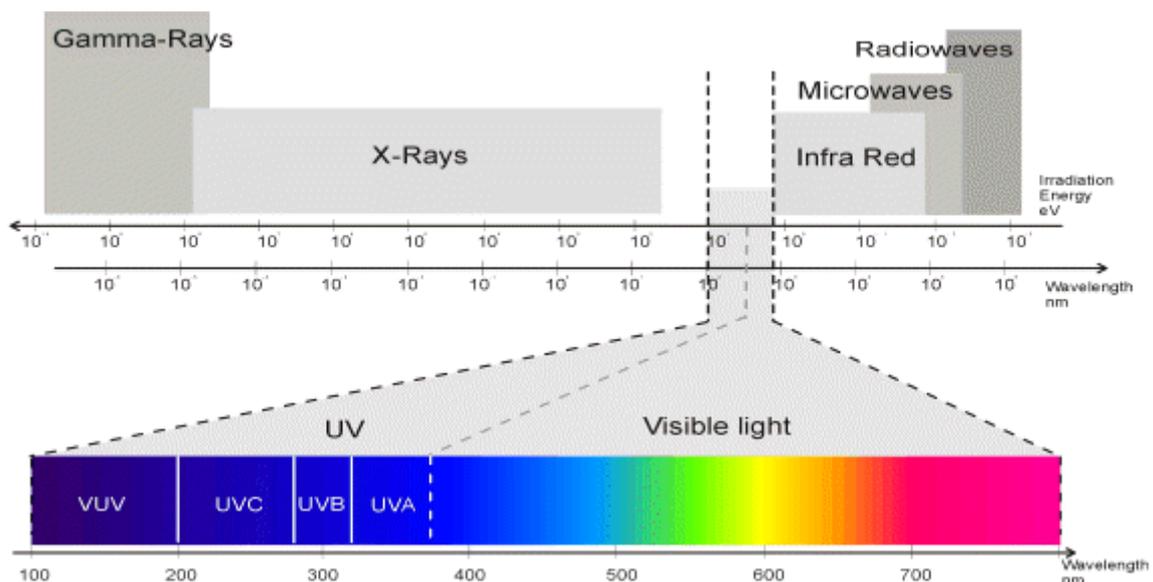

In addition, the skin can burn under influence of UVA and UVB radiation. Burning is accompanied by redness and in serious cases tremors, blisters, nausea and fever. In the long term the skin will lose its elasticity, suffer from accelerated aging and will remain sensitive for itching, pimples, etc.



**Ultraviolet light can damage skin and eyes.**  
**Wear the UV facial shield and protective clothes.**  
**As a user, never look directly into a switched-on lamp.**  
**Certain types of medication and cosmetics can increase sensitivity.**

## 2.8 User



Carefully read through this user manual before operating the DecoRad® Handmate UV 600.



Before switching on the DecoRad® Handmate UV 600, please ensure that the personal protection tools as described in the user manual are used. The UV facial shield and skin covering clothes (including gloves) are obligatory.



Dirt on the lamp and/or reflectors (e.g. from coatings or fingers) can shorten the life span of the lamp or reduce the UV effect. If needed, clean the cooled down lamp with isopropyl alcohol and paper towel.



Please make sure that bystanders without appropriate UV protection are at a safe distance of 6 meters / 20 ft



In order to prevent damage to the DecoRad® Handmate UV 600 and the user, the user is strictly prohibited to work with tools on the DecoRad® Handmate UV 600 in any other way than indicated in this user manual for the purpose of maintenance.



### VENTILATION

Keep the room ventilated. The UV lamp can be full spectrum, so there is might be ozone production, depending on the type of lamp.

## 3. Machine description

This chapter describes the parts and operational use of the DecoRad® Handmate UV 600.

### 3.1 Function

The DecoRad® Handmate UV 600 is the ultimate tool for instantly curing UV (floor) coatings. Please consult our website, [www.decorad.com](http://www.decorad.com) for a recent overview of suitable products!

### 3.2 Overview of the DecoRad® Handmate UV 600

1. Box
2. Handunit
3. Control / power unit
4. UV facial shield / gloves / tyvek suit
5. Extension pole
6. Supportwheel



### 3.3 Control elements



The following buttons can be found on the control panel:

1. On / off switch = power
2. On / off switch = UV lamp
3. Operation button: Shutter open / close


\* UV full power can be ignited with the button on the Handmate and / or on the extension pole

### 3.4 Standard equipment

The Handmate comes standard with:

- Box
- UV facial shield / UV gloves / tyvek suit
- Hand and control unit including 1 UV lamp

## 4. Putting into operation

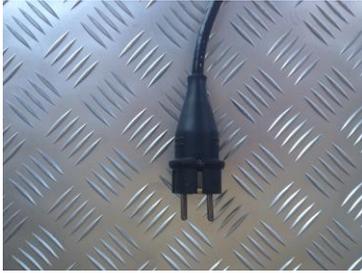

Always wear skin protective clothes (UV facial shield, gloves and clothes)!

Warning: The bottom of the lamp unit can become warm!



The HandMate UV has a power cable of 60 centimeters.

Connect the power cable to an extension cord.

Mains: 230V +/- 10% / 50 – 60 Hz / 10 – 16 A



Adjust the (optional) extension handle (Or the small handle; not necessary to connect the data cable, use the button on the lamp unit – small handle as no data cable!)




Connect the extension handle to the lamp unit



Connect the data cable of the extension handle to the back of the lampunit  
This is a male/female connection

### **CAREFULL!**

The data cable connector needs lineup  
Then tighten the swivel, but not too tightly !

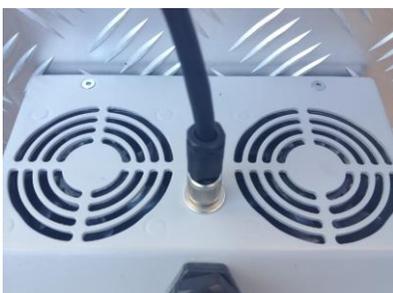



Press the ON button



The indicator will burn

On the display of the lamp unit the text COOL will be shown



Press the button with the “lamp symbol”




On the display of the lamp unit the text WAIT will be shown

The UV lamp needs 60 seconds to warm-up



When DIM is shown in the display, the HandMate UV 600 is ready to use

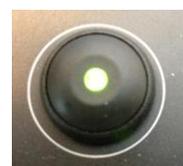

Use the button on the lampunit or the extension handle to start UV curing

### ATTENTION

**DISTANCE BETWEEN LAMPUNIT AND SURFACE: 2 - 10 CENTIMETERS**



Full power UV can only be used in the safe range of 2 – 10 centimeters



DIST = distance to surface is not correct / unsafe, a beeping signal can be heard

On the bottom of the lamp unit a shutter will slide in front of the UV bulb, UV curing is not possible any longer

Move the lamp unit in a position between 2 – 10 centimeters from the surface

The beeping signal will stop if a safe distance is reached, the text DIM will be shown

UV curing is only possible in this safe position

Switch off the UV lamp when ready. The text COOL will be shown.

Leave the HandMate UV 600 for 2 minutes to cool down.



**ATTENTION !  
SHUTTER IS VERY HOT**

Press the off button



Please unplug the HandMate UV 600 entirely from any power source.

## 5. Error messages

<b>Error</b>	<b>Description</b>	<b>Solution</b>
E14 (TEMP)	Over-temperature	The UV lamp is too hot, leave the UV lamp to cool down
E15 (FAN)	Fan fail	Please consult DecoRad® Systems
E16 (SHUT)	Shutter error	Needs shutter lubrication – see manual: maintenance
E17	Temperature sensor	Cool down, turn off for 5 minutes. In case of recurrence, please consult DecoRad® Systems
U51 (DIST)	Distance	Please position the Handmate between 2 – 10 cm distance from the floor
U94 (TIME)	Time management	Auto OFF after 5 minutes no use

## 6. Replacing lamp

### Replacing UV lamp



Caution: Never touch an UV lamp

Step 1: Place the Handmate on a flat surface with the lamp facing up.



Step 2: Plug in to approved power source  
Press ON button  
Press round button to open shutter

Step 3: Press the off button and unplug the Handmate



Step 4: Remove the old UV bulb

Step 5: Place new UV bulb by using a tissue

Step 6: Plug in to approved power source  
Press ON button  
Press round button to close shutter

Step 6: Press the off button and unplug the Handmate

## 7. Specifications

Handmate UV 600	
<b>General</b>	
Description	DecoRad® Handmate UV 600
Brand	DecoRad®
Colour	Silver / black
Working height	
Distance to object	2 cm
Cure path	10 cm
<b>Measurements and weights</b>	
Weight hand unit (kg)	Appx. 1,3
Measurements hand unit (cm)	25,5 x 15 x 10,5 (LxWxH)
Weight power supply/switch unit (kg)	Appx. 3,0
Measurements power supply/switch unit (cm)	24,5 x 17 x 7,5 (LxWxH)
Weight suitcase (kg)	Appx. 4,8
Measurements suitcase (cm)	72 x 31 x 28,5 (LxWxH)
Total weight (kg)	Appx. 9,1
Measurements (cm)	73 x 32 x 29 (LxWxH)
<b>Power supply</b>	
Power UV - ultraviolet (Watt)	600
Power Voltage	230 Vac +/- 10% 50/60 HZ 10 Amp. circuit
Cable powering (cm)	50
Cable from switch to hand unit (cm)	165
<b>Lamps</b>	
Type UV-lamp	UV-600W
Number of UV-lamp(s)	1
Burning hours UV-lamp(s)	Appx. 500
Start-up time UV-lamp(s)	Appx. 60 seconds
Ozone free or ozone building	At your choice
<b>Warranty (excluding (IR) &amp; UV lamp(s))</b>	
Manufacturer's warranty	1 year
Warranty type	Carry-in
<b>Inspections</b>	
CE Approved	✓
TÜV certified (radiation)	✓
<b>Accessories</b>	
Standard	Service and repair manual, safety package, suitcase, extension pole, support wheel
Optional	Spare lamp